 




---

**swoop**  
**INSTRUCTION MANUAL**

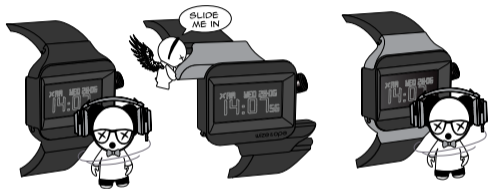

**PLAY WITH THE SPARE PARTS SLIDES AND STRAPS**

## **TABLE OF CONTENTS** **INSTRUCTION MANUAL**

Swoop - English .....	page 06
Swoop - Français .....	page 14
Join the Posse .....	page 21
Watch Artwork .....	page 23
Figure Artwork .....	page 25
International Warranty .....	page 27
French Warranty .....	page 29



**WARNING :**

(PROFESSIONALS RECOMMEND)

**ALWAYS USE  
CAUTION**

MEASURE TWICE  
CUT ONCE

Wize comes from another planet. He's a big fan of people and culture on earth. He travels the world to discover people, cultures and artistic trends. Once he meets new people and tribes, he adapts and transforms his look and behavior and melts himself in. He then becomes «ope» for «open minded». Wize loves our world! Our products are following the same philosophy, they can be transformed depending on your environment and your mood. We welcome you to the 2011.1 catalog and hope you'll enjoy it. But first of all, **«don't forget to open your mind!».**

**wize&ope**

# INSTRUCTION MANUAL

 
The Swoop

---

ENGLISH



# WATCH LAYOUT FOR THE WATCH

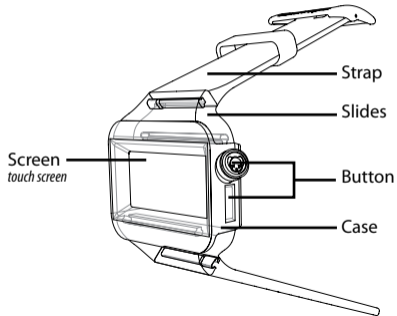

## TIME SETTING

### 1. Power saving mode

- When pushing and holding button 2\* for 5 seconds, the power saving mode is activated and the screen turns black completely.
- Pushing either the button 1\* or button 2\* can turn on the screen again.

### 2. Light

- Light is activated when pushing the screen (3\*).

### 3. Adjusting the time

- Make sure you are on regular time display mode
- Press the button 1\*, and hold it until the



12/24 Hr mode appears.

- Press the button 2\* to select 12Hr or 24Hr mode.
- Press the button 1\* to move to other sections (seconds, minutes, hour, year, month, day, date format).
- When you want to adjust one of them, click on the button 2\*.

### 4. Adjusting the alarm

- Go to the alarm mode display (by pressing the button 1\* once).

 


- Keep the button (1\*) held down, and the hours will start blinking.
- To adjust, press on the button 2\*.
- Same for minutes, and alarm on/off mode
- Click on the button 1\* to exit the alarm mode.
- You find yourself in the chrono mode
- click button 1\* again to go back to time display.

### 5. Chrono




- click twice on the button 1\*.
- to start and stop the chrono, press the button 2\*.
- to reset, hold down the button 1\*.

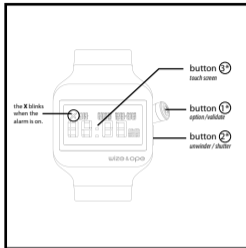


- to go back to regular time display, press once the button (1\*).


### Time mode

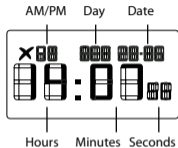 

### Alarm mode

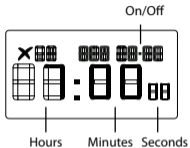 


### Chrono

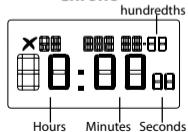 


## REMOVE | Replace the strap and slides



Remove 
 
## WATCH SPECIFICATION

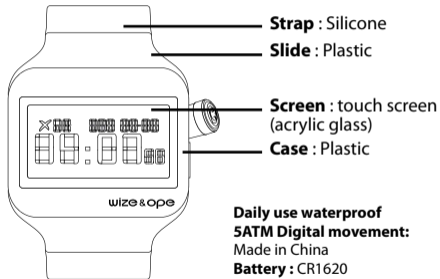

Wize, lors de ses voyages, découvre les cultures et tendances artistiques de notre planète. Wize se fond aux membres des différentes communautés et s'adapte aux environnements. Il devient alors «Ope». Ope pour «open minded», ouverture d'esprit. Les aventures de Wize sont traitées sous formes de bandes dessinées, dessins animés et racontent ses aventures. Nos montres sont basées sur la même philosophie, elles peuvent être transformée à l'infini. et surtout n'oubliez pas «**open your mind!**»

**wize & ope**

## **MODE D'EMPLOI**

 
La Swoop

---

FRANÇAIS



## **FONCTION DE LA MONTRE**

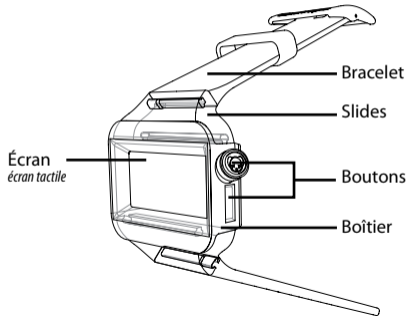

## REGLAGES

### 1. Mode économie d'énergie

- Cliquer pendant 5 secondes sur le bouton 2\*, le mode économie d'énergie » s'active et l'écran devient complètement noir.
- Cliquer une fois de plus sur le bouton 1\* or le bouton 2\*, et l'écran se réactive en mode normal.

### 2. Lumière

La lumière s'active en touchant le milieu de l'écran (3\*).

### 3. Réglage de la montre

- Avant tout, assurez-vous que vous êtes sur le mode d'affichage de l'heure.
- Cliquer sur le bouton 1\* , et maintenez

enfoncé jusqu'à ce que 12/24Hr apparaisse.

- Cliquer sur le bouton 2\* pour sélectionner le mode d'affichage au format 12 Heures ou 24Heures



- Cliquer sur le bouton 1\*, pour passer dans les autres sections de réglage (secondes, minutes, heure, année, mois, jour, et format de date).
- Quand vous souhaitez intervenir, cliquer sur le bouton 2\*.

### 4. Ajuster l'alarme

- Aller dans le mode alarme en pressant une fois sur le bouton 1\*.

 


- Garder le bouton 1\* appuyé, et les heures commenceront à clignoter.
- Pour ajuster, cliquer sur le bouton 2\*.
- Idem pour les minutes, et le mode on/off de l'alarme.
- Cliquer sur le bouton 1\* pour sortir de mode alarme.
- Vous vous retrouverez dans le mode chronographe.
- Cliquer sur le bouton 1\* à nouveau pour retourner sur le mode d'affichage normal.

### 5. Chronographe




- Cliquer deux fois sur le bouton 1\*.
- Pour lancer le chrono, appuyer sur le bouton 2\*.
- Pour le remettre à zéro, appuyer sur le

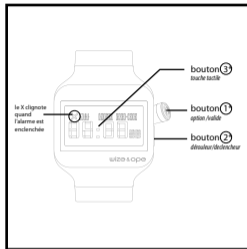


- bouton 1\*
  - Pour retourner au mode normal d'affichage, cliquer une fois sur le bouton 1\*.


### mode heures et dates

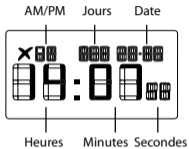 


### mode alarme

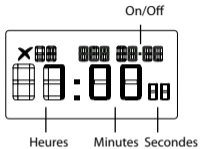 


### mode chronometre

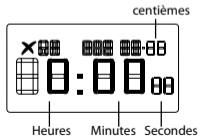 

## ENLEVER | Remplacer les slides ou les bracelets

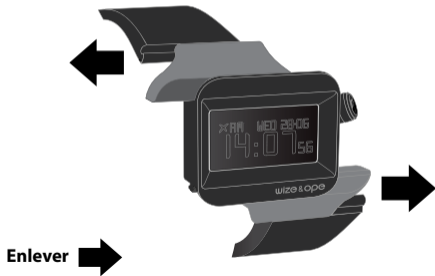 

## SPECIFICATION DE LA MONTRE

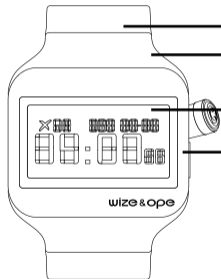 

**Bracelet** : Silicone.

**Slide** : Plastique.

**Écran** : écran tactile  
(Verre : Acrylique).

**Boîtier** : Plastique.

**Résiste à l'eau en usage  
quotidien 5ATM .**

Mouvement digital.

Fabriqué en Chine.

**Batterie** : CR1620.

## JOIN WIZE&OPE POSSE TODAY

### MEMBER DETAILS

FIRST NAME

FAMILY NAME

ADDRESS

ZIP CODE / CITY

COUNTRY

PHONE

E-MAIL

DATE OF BIRTH

SEX  ♀  ♂

PLEASE SEND FUTURE INFORMATION IN THE FOLLOWING LANGUAGE :

ENGLISH

FRENCH

ITALIAN

JAPANESE

Please send the form to wize&ope by mail or fax or give it to a Sales Agent at your local wize&ope store. Please attach a proof of purchase.

 


46, rue Cauchy 75015 Paris  
contact@wizeandope.com  
Fax:+33 (0)1 45 54 05 38



This wize&ope artwork was made by

\_\_\_\_\_

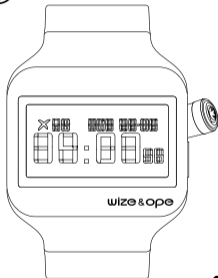


emailed to wize&ope

kept secret

 wize&ope | copyrighted



 This wize&ope artwork was made by \_\_\_\_\_

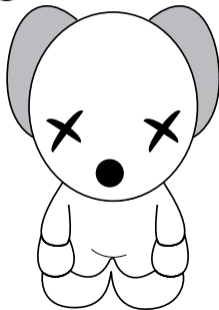

- emailed to **wize&ope**
- kept secret

 **wize&ope** | copyrighted

## **INTERNATIONAL WARRANTY**

This Wize&ope watch is warranted for a period of TWO YEARS from the date of purchase against manufacturing defects under the terms and condition of this warranty. For warranty claim, a proof of purchase (with date) together with the warranty booklet correctly completed by an authorized dealer are required.

### **This warranty does not cover :**

- > Battery , lens, case, strap, slides.
- > Damages to the materials resulting from improper handling, negligence and accidents.
- > There may be color change for light color and transparent straps after normal wear for some time.

> Possible functional damage resulting from abnormal use or/and abuse of the watch, e.g. watch damage caused by opening caseback inappropriately or/and pulling out the crown/pushers under watch may affect the proper function of the watch.

> Defect related to servicing or repairing performed by a person not duly authorized by wize&ope Agents.

For service work that is not covered under warranty term and period, wize&ope agent will perform the services requested for a charge depending on the watch models and types of work involved.

These charges are subject to change and confirmation. Please contact your dealers or one of our authorized wize&ope Agents.

## **WIZE&OPE GARANTIE CE PRODUIT ■ ■**

Ce produit wize&ope est garantie pour une période de 2 ans, à partir de la date d'achat, contre le ticket de caisse ou la preuve d'achat. La garantie couvre les problèmes éventuels liés aux défauts de fabrication et liés aux termes de cette garantie. Pour toute réclamation, une preuve d'achat doit être communiquée avec la date d'achat et le bon de garantie signé par le revendeur autorisé.

### **Ce que cette garantie ne couvre pas:**

> Batterie, écran, boîtier, bracelet, slides.

> Disfonctionnement dû à une mauvaise utilisation du produit. Par exemple : en tirant trop fort sur les bracelets pour les échanger.

> Un défaut du à l'éventuelle réparation du produit pour un réparateur non agréé par wize&ope ou un de ses agents.

Ces conditions sont susceptibles d'évoluer.

Merci de contacter votre agent autorisé pour plus d'informations.



HAVE  
A GOOD  
TIME

Model

Date of purchase

Name and signature of dealer

 **wize & ope**  

---

**swoop**



DESIGNED IN PARIS

W&O Group - 46 rue Cauchy - 75015 Paris - Tel. +33 (0)1 45 54 03 86  
contact@wizeandope.com - www.wizeandope.com